

TABLE OF THE PROGRAMMABLE SYSTEM SETTINGS

Factory settings are marked with grey background

Level name	Level and sublevel	Indicator	
		RED	GREEN
Recording remote units to the system memory	1. By-turn recording (up to 3 two-way and 1 additional one-way remotes)	See description	
Entering a secret code	2. Entering a new secret code	See description	
Shock sensor settings	3.1 Warning level setting	See description	
	3.2 Alarm level setting	See description	
	3.3 Delay of the sensor activation during arming	PROHIBITED	ALLOWED
	3.4. Delay of the additional sensor activation during arming	PROHIBITED	ALLOWED
	3.5 Delay time setting (0...2 minutes)	15 seconds	
Immobilizer and general settings	4.1 Immobilizer activation 25 sec. upon system disarming	PROHIBITED	ALLOWED
	4.2 Immobilizer activation immediately upon disarming	PROHIBITED	ALLOWED
	4.3 Automatic rearming	PROHIBITED	ALLOWED
	4.4 Passive arming	PROHIBITED	ALLOWED
	4.5 Signals of siren in preliminary level of the switch	PROHIBITED	ALLOWED
	4.6 Signals of siren in panic and alarm	PROHIBITED	ALLOWED
	4.7 Deactivation by iButton only (PIN deactivated)	PROHIBITED	ALLOWED
	4.8 Immobilizer deactivation by iButton only	PROHIBITED	ALLOWED
	4.9 Recording iButton keys to the system memory	PROHIBITED	ALLOWED
Limit switches	5.1 Trunk sensor polarity	NEGATIVE	POSITIVE
	5.2 Hood sensor polarity	NEGATIVE	POSITIVE
	5.3 Doors sensor polarity	NEGATIVE	POSITIVE
	5.4 Door sensors scanning delay activation	PROHIBITED	ALLOWED
	5.5 Oil sensor, charge lamp polarity	NEGATIVE	POSITIVE
	5.6 Polarity of the neutral, hand brake	NEGATIVE	POSITIVE
	5.7 Delay time (0...2 minutes)	15 seconds	
Interlocks	6.1 Interlock activation over the timer channel CH1	PROHIBITED	ALLOWED
	6.2 Interlock activation over the timer channel CH2 (see 6.8)	PROHIBITED	ALLOWED
	6.3 Interlock activation over the timer channel CH3 (see 6.8)	PROHIBITED	ALLOWED
	6.4 CH4 Interlock activation over the timer channel (see 6.8)	PROHIBITED	ALLOWED
	6.5 Interlock activation over the timer channel CH5	PROHIBITED	ALLOWED
	6.6 Interlock relay contacts type (refers to the channels CH1, CH2, CH3 only)	N/O	N/C
	6.7 Interlock relay contacts type (refers to the channels CH4, CH5 only)	N/O	N/C
	6.8 Activation of the code relay on the channels CH2, CH3, CH4 (for N/O contacts type only see 6.6, 6.7)	PROHIBITED	ALLOWED
Central lock	7.1 Pulse of the door locks control duration	0,8 seconds	5 seconds
	7.2 Door locking when ignition is activated and unlocking when deactivated	PROHIBITED	ALLOWED
	7.3 Doors unlocking during system disarming	PROHIBITED	ALLOWED
	7.4 Double pulse of locking	PROHIBITED	ALLOWED
	7.5 Double pulse of unlocking	PROHIBITED	ALLOWED
	7.6 "COMFORT" pulse	PROHIBITED	ALLOWED
	7.7 Use of timer channel CH3 for a two-step doors unlocking	PROHIBITED	ALLOWED
	7.8 Use of timer channel CH4 for a two-step doors unlocking	PROHIBITED	ALLOWED
	7.9 "COMFORT" pulse duration	15 seconds	

Trunk lock	8.1 Trunk lock control over timer channel CH1	PROHIBITED	ALLOWED
	8.2 Trunk lock control over timer channel CH2	PROHIBITED	ALLOWED
	8.3 Trunk lock control over timer channel CH3	PROHIBITED	ALLOWED
	8.4 Trunk lock control over timer channel CH4	PROHIBITED	ALLOWED
	8.5 Trunk lock control over timer channel CH5	PROHIBITED	ALLOWED
	8.6 Pulse of the trunk lock control duration	0.8 seconds	5 seconds
Ignition backup (IB)/ turbo-timer (TT) function	9.1 IB/TT control over the timer channel CH1	PROHIBITED	ALLOWED
	9.2 IB/TT control over the timer channel CH2	PROHIBITED	ALLOWED
	9.3 IB/TT control over the timer channel CH3	PROHIBITED	ALLOWED
	9.4 IB/TT control over the timer channel CH4	PROHIBITED	ALLOWED
	9.5 IB/TT control over the timer channel CH5	PROHIBITED	ALLOWED
	9.6 Turbo-timer 30 seconds	PROHIBITED	ALLOWED
	9.7 Turbo-timer 1 minute	PROHIBITED	ALLOWED
	9.8 Turbo-timer 2 minutes	PROHIBITED	ALLOWED
	9.9 Ignition backup time (0...2 hours)	20 minutes	
Specialty features	10.1 "Anti Hijack" mode	PROHIBITED	ALLOWED
	10.2 Restoring factory settings	PROHIBITED	ALLOWED
	10.3 Use of a one-way remote control unit	PROHIBITED	ALLOWED
Timer channel CH1 (events of activation)	11.1 Activate when arming the system	PROHIBITED	ALLOWED
	11.2 Activate when disarming the system	PROHIBITED	ALLOWED
	11.3 Activate when switching ignition on	PROHIBITED	ALLOWED
	11.4 Activate when switching ignition off	PROHIBITED	ALLOWED
	11.5 Activate during alarm response	PROHIBITED	ALLOWED
	11.6 Activate when disabling alarm	PROHIBITED	ALLOWED
	11.7 To activate by triggering from the remote's button	PROHIBITED	ALLOWED
	11.8 To activate without time limits	PROHIBITED	ALLOWED
	11.9 Activate temporarily (0...2 minutes)	0.8 seconds	
	Timer channel CH2 (events of activation)	12.1 Activate when arming the system	PROHIBITED
12.2 Activate when disarming the system		PROHIBITED	ALLOWED
12.3 Activate when switching ignition on		PROHIBITED	ALLOWED
12.4 Activate when switching ignition off		PROHIBITED	ALLOWED
12.5 Activate during alarm response		PROHIBITED	ALLOWED
12.6 Activate when disabling alarm		PROHIBITED	ALLOWED
12.7 To activate by triggering from the remote's button		PROHIBITED	ALLOWED
12.8 To activate without time limits		PROHIBITED	ALLOWED
12.9 Activate temporarily (0...2 minutes)		0.8 seconds	
Timer channel CH3 (events of activation)		13.1 Activate when arming the system	PROHIBITED
	13.2 Activate when disarming the system	PROHIBITED	ALLOWED
	13.3 Activate when switching ignition on	PROHIBITED	ALLOWED
	13.4 Activate when switching ignition off	PROHIBITED	ALLOWED
	13.5 Activate during alarm response	PROHIBITED	ALLOWED
	13.6 Activate when disabling alarm	PROHIBITED	ALLOWED
	13.7 To activate by triggering from the remote's button	PROHIBITED	ALLOWED
	13.8 To activate without time limits	PROHIBITED	ALLOWED
	13.9 Activate temporarily (0...2 minutes)	0.8 seconds	
	Timer channel CH4 (events of activation)	14.1 Activate when arming the system	PROHIBITED
14.2 Activate when disarming the system		PROHIBITED	ALLOWED
14.3 Activate when switching ignition on		PROHIBITED	ALLOWED
14.4 Activate when switching ignition off		PROHIBITED	ALLOWED
14.5 Activate during alarm response		PROHIBITED	ALLOWED
14.6 Activate when disabling alarm		PROHIBITED	ALLOWED
14.7 To activate by triggering from the remote's button		PROHIBITED	ALLOWED
14.8 To activate without time limits		PROHIBITED	ALLOWED
14.9 Activate temporarily (0...2 minutes)		0.8 seconds	

Timer channel CH5 (events of activation)	15.1 Activate when arming the system	PROHIBITED	ALLOWED
	15.2 Activate when disarming the system	PROHIBITED	ALLOWED
	15.3 Activate when switching ignition on	PROHIBITED	ALLOWED
	15.4 Activate when switching ignition off	PROHIBITED	ALLOWED
	15.5 Activate during alarm response	PROHIBITED	ALLOWED
	15.6 Activate when disabling alarm	PROHIBITED	ALLOWED
	15.7 To activate by triggering from the remote's button	PROHIBITED	ALLOWED
	15.8 To activate without time limits	PROHIBITED	ALLOWED
	15.9 Activate temporally (0...2 minutes)	0.8 seconds	
Timer channel CH1 (events of deactivation)	16.1 Deactivate when arming the system	PROHIBITED	ALLOWED
	16.2 Deactivate when disarming the system	PROHIBITED	ALLOWED
	16.3 Deactivate when switching ignition on	PROHIBITED	ALLOWED
	16.4 Deactivate when switching ignition off	PROHIBITED	ALLOWED
	16.5 Deactivate during alarm response	PROHIBITED	ALLOWED
	16.6 Deactivate when disabling alarm	PROHIBITED	ALLOWED
	16.7 Use double pulse	PROHIBITED	ALLOWED
	16.8 Pause before activation	PROHIBITED	ALLOWED
	16.9 Pause duration (0...2 minutes)	5 seconds	
Timer channel CH2 (events of deactivation)	17.1 Deactivate when arming the system	PROHIBITED	ALLOWED
	17.2 Deactivate when disarming the system	PROHIBITED	ALLOWED
	17.3 Deactivate when switching ignition on	PROHIBITED	ALLOWED
	17.4 Deactivate when switching ignition off	PROHIBITED	ALLOWED
	17.5 Deactivate during alarm response	PROHIBITED	ALLOWED
	17.6 Deactivate when disabling alarm	PROHIBITED	ALLOWED
	17.7 Use double pulse	PROHIBITED	ALLOWED
	17.8 Pause before activation	PROHIBITED	ALLOWED
	17.9 Pause duration (0...2 minutes)	5 seconds	
Timer channel CH3 (events of deactivation)	18.1 Deactivate when arming the system	PROHIBITED	ALLOWED
	18.2 Deactivate when disarming the system	PROHIBITED	ALLOWED
	18.3 Deactivate when switching ignition on	PROHIBITED	ALLOWED
	18.4 Deactivate when switching ignition off	PROHIBITED	ALLOWED
	18.5 Deactivate during alarm response	PROHIBITED	ALLOWED
	18.6 Deactivate when disabling alarm	PROHIBITED	ALLOWED
	18.7 Use double pulse	PROHIBITED	ALLOWED
	18.8 Pause before activation	PROHIBITED	ALLOWED
	18.9 Pause duration (0...2 minutes)	5 seconds	
Timer channel CH4 (events of deactivation)	19.1 Deactivate when arming the system	PROHIBITED	ALLOWED
	19.2 Deactivate when disarming the system	PROHIBITED	ALLOWED
	19.3 Deactivate when switching ignition on	PROHIBITED	ALLOWED
	19.4 Deactivate when switching ignition off	PROHIBITED	ALLOWED
	19.5 Deactivate during alarm response	PROHIBITED	ALLOWED
	19.6 Deactivate when disabling alarm	PROHIBITED	ALLOWED
	19.7 Use double pulse	PROHIBITED	ALLOWED
	19.8 Pause before activation	PROHIBITED	ALLOWED
	19.9 Pause duration (0...2 minutes)	5 seconds	
Timer channel CH5 (events of deactivation)	20.1 Deactivate when arming the system	PROHIBITED	ALLOWED
	20.2 Deactivate when disarming the system	PROHIBITED	ALLOWED
	20.3 Deactivate when switching ignition on	PROHIBITED	ALLOWED
	20.4 Deactivate when switching ignition off	PROHIBITED	ALLOWED
	20.5 Deactivate during alarm response	PROHIBITED	ALLOWED
	20.6 Deactivate when disabling alarm	PROHIBITED	ALLOWED
	20.7 Use double pulse	PROHIBITED	ALLOWED
	20.8 Pause before activation	PROHIBITED	ALLOWED
	20.9 Pause duration (0...2 minutes)	5 seconds	